


## INSTALLATION INSTRUCTIONS & SPECIFICATIONS


- 1- Locate the best position to install the door viewer. Ideally at eye level (approximately 5 feet)
- 2- Use a 1/8" drill bit to make a pilot hole completely through the door. Keep the drill horizontal
- 3- Use the proper bit size, as determined by the size of the Inner lens Cylinder, to drill the hole halfway, then move to the other side of the door and drill through the other half. Keep the drill horizontal.
- 4- Disassemble the door viewer by rotating the inner lens cylinder counter clockwise while holding the Outer lens cover section.
- 5- Insert the Outer lens Cover section from outside of the door, then screw the inner lens cylinder from the inside of the door clockwise while holding the Outer lens cover section until the viewer is tight.

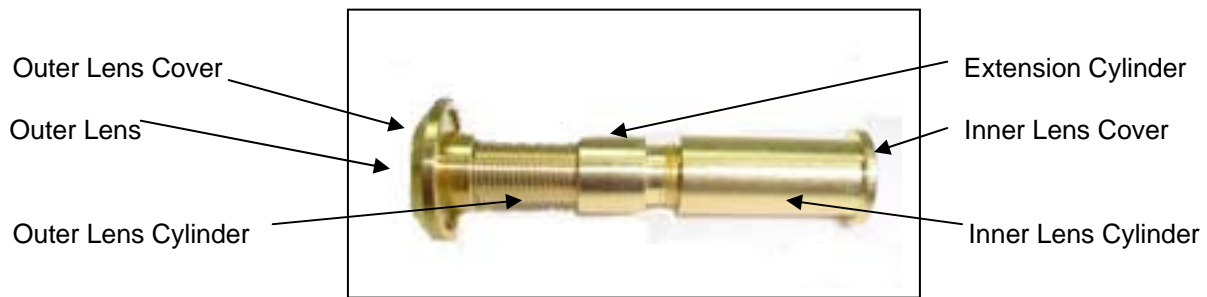

### XTRASCOPE SERIES PEEPHOLES



### EZVIEW SERIES VIEWERS

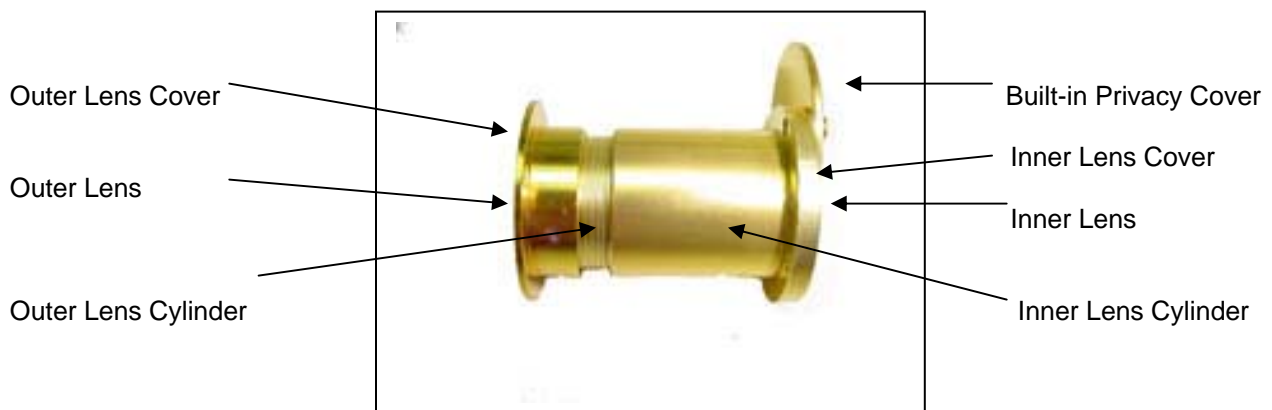

## PEEPHOLES & DOOR VIEWERS SPECIFICATIONS

| MODEL                              | OUTER LENS COVER DIAMETER | INNER LENS CYLINDER DIAMETER ** | INNER LENS COVER DIAMETER          | DOOR WIDTH RANGE |
|------------------------------------|---------------------------|---------------------------------|------------------------------------|------------------|
| EZVIEW<br>26D503C                  | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 1 3/8" – 2 1/8"  |
| EZVIEW-BR<br>26D503B               | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 1 1/2" - 2 3/8"  |
| EZVIEW-EX<br>26D507C               | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 2 3/4" – 3 1/2"  |
| EZVIEW-XL<br>26D504C               | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 1 7/8" – 2 3/4"  |
| EZVIEW-LL<br>26D526C               | 40mm ( 1 9/16" )          | 28mm ( 1 1/8" )                 | 40mm ( 1 9/16" )                   | 5 3/8" – 8.0"    |
| EZVIEW2<br>26D302B                 | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 1 1/2" – 2 1/8"  |
| EZVIEW-EX2<br>26D307B              | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 2 7/8" – 3 1/2"  |
| MINISCOPE<br>14D914C               | 35mm ( 1 3/8" )           | 14mm ( 9/16" )                  | 17mm ( 1 1/16" )                   | 3/4" – 1 3/8"    |
| MINIVIEW<br>26D825C                | 32mm ( 1 1/4" )           | 24mm ( 15/16" )                 | 32mm ( 1 1/4" )<br>28mm ( 1 1/8" ) | 1/2" – 1 3/8"    |
| NUSCOPE<br>26D301B                 | 35mm ( 1 3/8" )           | 26mm ( 1 1/16" )                | 35mm ( 1 3/8" )                    | 1 1/4" – 2 .0"   |
| WIDESCOPE-EX<br>27D827C            | 38mm ( 1 1/2" )           | 28mm ( 1 1/8" )                 | 38mm ( 1 1/2" )                    | 1 3/4" – 2 1/8"  |
| WIDESCOPE-EX<br>27D827C + 1 EXT    | 38mm ( 1 1/2" )           | 28mm ( 1 1/8" )                 | 38mm ( 1 1/2" )                    | 2 1/2" – 3.0"    |
| XTRASCOPE<br>14D214C               | 26mm ( 1 1/16" )          | 14mm ( 9/16" )                  | 17mm ( 1 1/16" )                   | 1 3/8" – 2 1/4"  |
| XTRASCOPE<br>14D214C + 1 EXT       | 26mm ( 1 1/16" )          | 14mm ( 9/16" )                  | 17mm ( 1 1/16" )                   | 1 3/4" – 2 7/8"  |
| XTRASCOPE PLUS<br>19D218C (BRASS)  | 30mm ( 1 3/8" )           | 18mm ( 3/4" )                   | 23mm ( 7/8" )                      | 2 1/8" – 4 1/2"  |
| XTRASCOPE PLUS<br>19D218C (SILVER) | 30mm ( 1 3/8" )           | 17mm ( 5/8" )                   | 30mm ( 1 3/8" )                    | 2 3/4" – 4 3/8"  |

\*\* The dimension of the Inner Lens Cylinder will determine the size of the opening required for installations.